i DISPLAY
Interactive Digital Displays

Six Cell Docking Station
User Manual

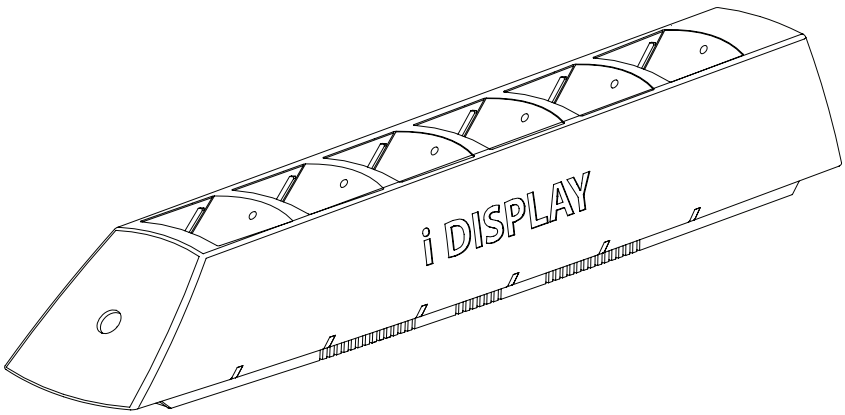

Outform © All Rights Reserved

Index

Safety and Warnings	4	Main Supply
	4	Main Adaptor
	5	FCC Radiation Exposure Statement
	5	Warning
Overview	6	Components
	6	Features
Operating Instructions	7	Quick Start
Specifications	8	
Power Supply Unit Electrical Data	8	
Troubleshooting	8	

Thank you for purchasing an Outform I Display product.

Before you start to use your new I Display product, please read the user manual carefully to enjoy I Display performance and a longer service life.

Keep this manual in a safe place for future reference.

In the interest of continually improving our product, I Display reserves the right to update or modify information contained in this manual.

The screen and the illustration show in this manual were produced during the development stage and may differ from the actual product. Unless otherwise specified. For further information or support, please contact:
support@i-display.com

Safety and Warnings

Main Supply

This equipment is designed to operate from a 100-240 Volt, 50/60Hz AC main supply. The use of other power sources may damage this equipment. Check that the voltage marked on the rating plate located at the rear of the power adaptor states 100-240V. The manufacturer will NOT accept responsibility for damage or injury caused by connecting to the wrong voltage.

Main Unit

This device complies with CE/FCC regulations.

Main Adaptor

The power adaptor supplied is compatible with a standard main socket. NB. If the power adaptor or lead gets damaged, it must be replaced by a qualified service agent with an approved adaptor of the same type and rating.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference which may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio / TV technician for help. In accordance with FCC requirements, changes or modifications not expressly approved by manufacturer could void the user's authority to operate this product.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

Dangerous voltage constituting a risk of electric shock is present inside this equipment.

This mark is applied to show the equipment conforms to European safety and electro-magnetic compatibility standards.

There are important operating and maintenance instructions in the literature accompanying this equipment.

Warning

- The main plug shall be the main disconnect device and shall remain operable at all times.
- Never let anyone push objects into holes and ventilation slots.
- Do not expose this product to dripping or splashing or place any objects filled with liquids on or near the product.
- Do not place a naked flame source such as lighted candles on or near this product.
- Do not attempt to repair this product yourself; always get a qualified service agent to carry out adjustments or repairs.

Overview

Components

1. Six Cell Docking Station
2. Power Supply Unit
3. User Manual

Features

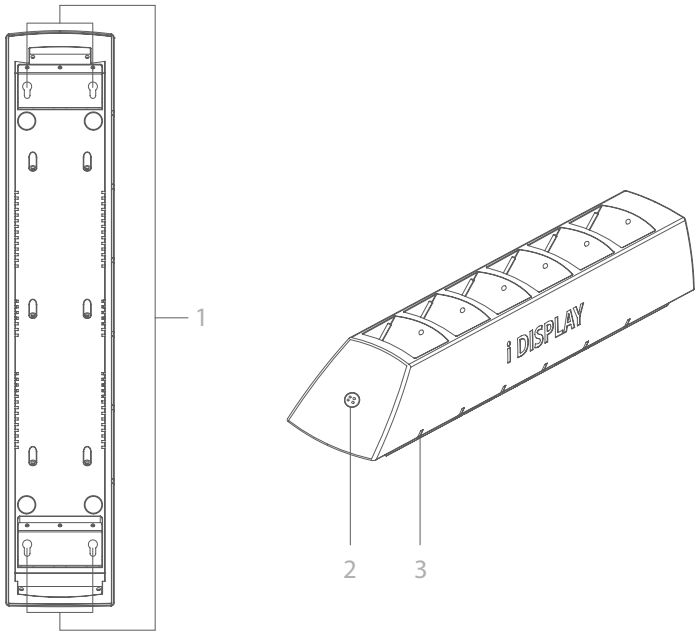

1. Hole for wall mount
2. The power socket: Power supply
3. LED indicator: charging status indicator

Operating Instructions

Quick Start

1. Remove the 6 cell docking station from the package and place it on a desk.
2. Take out the power adaptor
3. Connect the power cable of the adaptor to the docking station
4. Connect the adaptor to the electricity

Important note:

- LED indicators (when a battery is in the compartment)
  When LED indicator is Red , the battery is being charged.
  When LED indicator is Green, the battery is fully charged.
  When LED indication is Blinking Red, the compartment temperature is too high, please take out the battery and wait for a short while. Afterwards return the battery back for regular charging.
- The battery life will be decreased if the environment temperature is over 45 Celsius.
- When the battery is fully charged, do not leave it in the docking station as it will reduce the battery life.
  Battery Charging time is approx. 5.5 hours.

Specifications

Charging time
4-5 hours.

Power Supply Unit

Power Adaptor: Input 100-240V 50/60Hz, 1.8A
Output 12V , 12000mA.

Troubleshooting

Problem	Troubleshooting
LED indicator is off	1. Make sure the charging unit is connected to power supply 2. Make sure the battery is inserted to the charging unit in the right direction

i DISPLAY

Interactive Digital Displays

For further information or support, please contact: support_iView@i-display.com

Outform © All Rights Reserved